

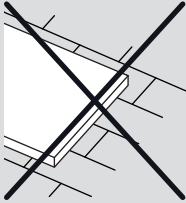
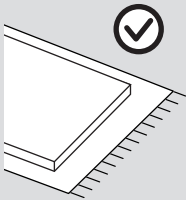
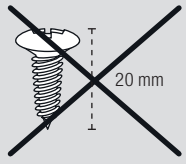







NOTICE DE MONTAGE / MONTAGEHANDLEIDING / ASSEMBLY INSTRUCTIONS




1




2

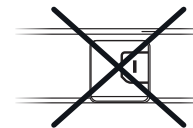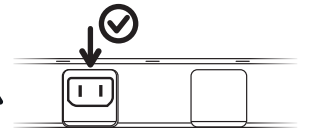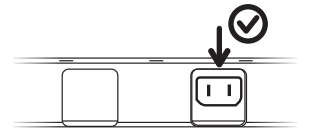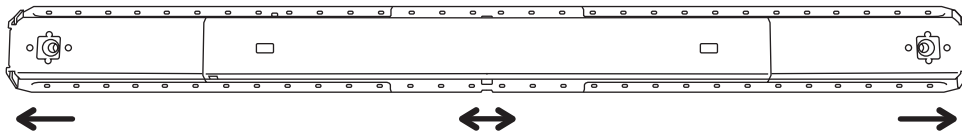


3

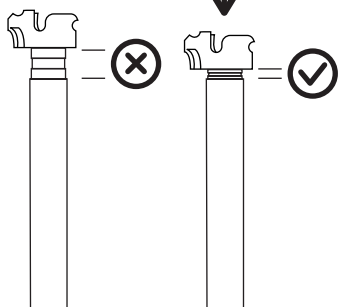

4

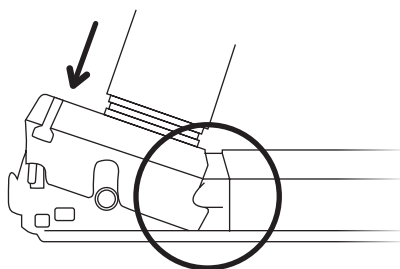


CLICK!

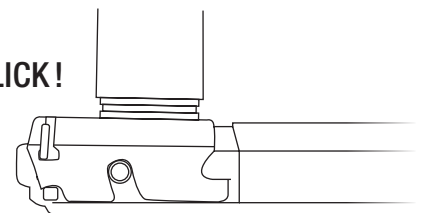


NOTICE DE MONTAGE / MONTAGEHANDLEIDING / ASSEMBLY INSTRUCTIONS


5

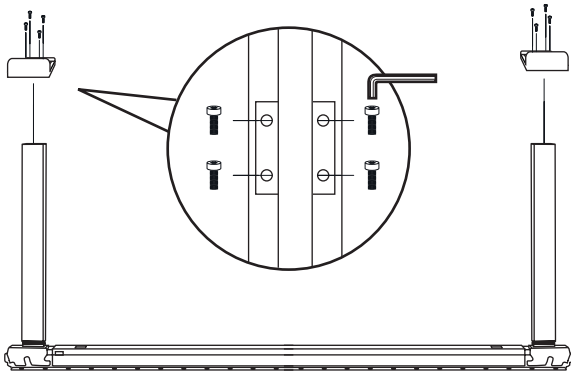

6

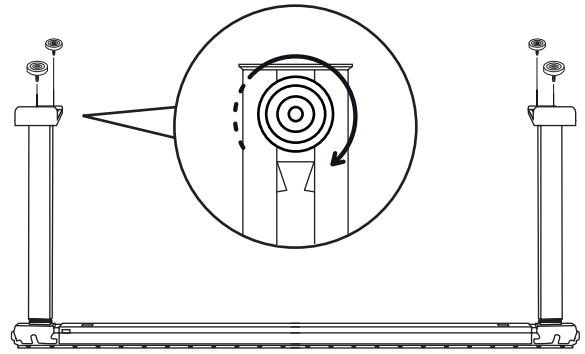


7

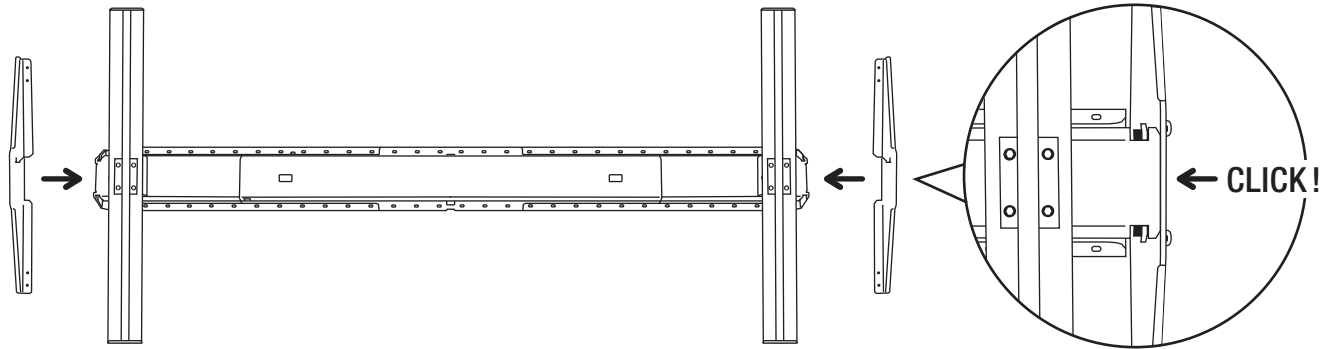


8

!! UTILISER LA VISSERIE 17MM | GEBRUIK DE 17 MM SCHROEVEN | USE 17MM SCREWS !!

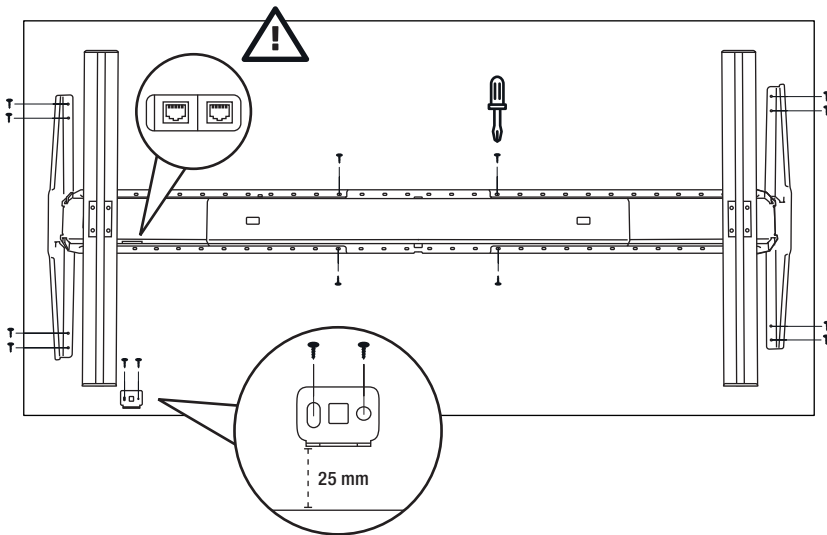

9

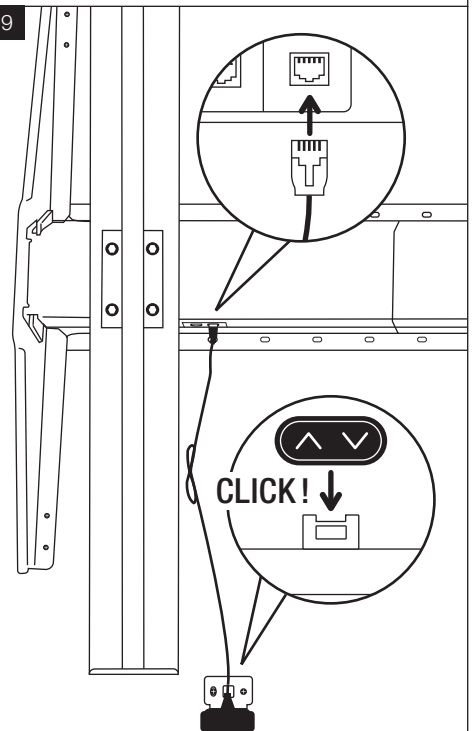

10



11

